

# AJW

## U735-1626-SM

Medicine Cabinet

REVISION 07/16

JOB #:

ITEM #:

QUANTITY:



MOUNTING

HANDING

TYPE

SIZE

OTHER

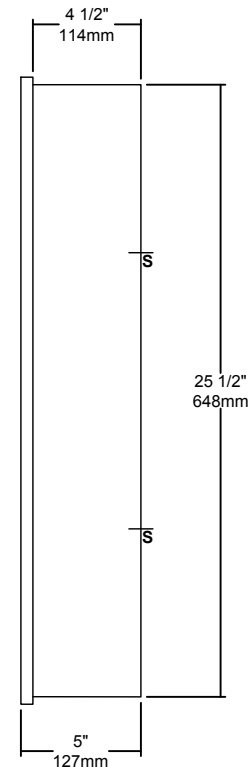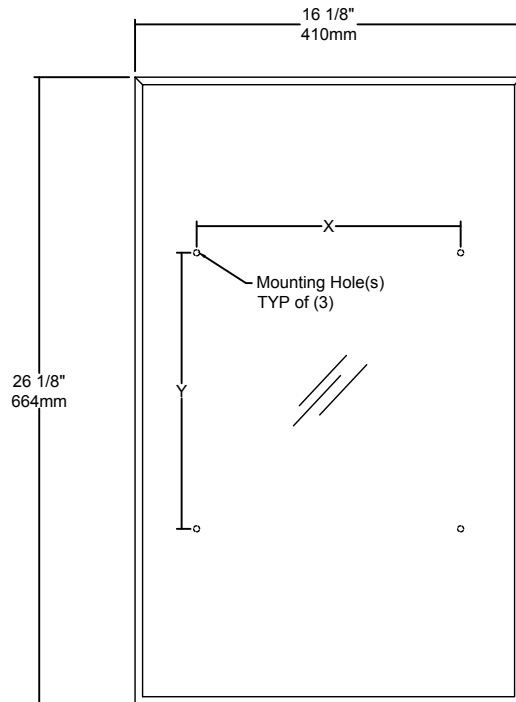

### SPECIFICATIONS

**Body:** Formed and welded steel housing; 25ga steel construction with white, heat cured, acrylic paint finish.

**Shelving:** 26ga galvanized steel shelves with white, heat cured, enamel paint finish, (3) Fixed Typical, Please advise for removable

**Mirror Door:** Framed mirror door; 2mm thick float glass mirror door front; 30ga steel door back with white, heat cured, acrylic paint finish; Reversible for left-hand or right-hand door swing; Magnetic catch in cabinet body flange aligns to striker plate on the door, (1) typical.

**Frame:** Polished stainless steel frame.

**Hinges:** 16" piano hinge welded to the door and mechanically fastened to the cabinet body, (1) typical.

**Overall Size:** 16-1/8"W x 26-1/8"H  
410mm x 664mm

### INSTALLATION

Coordinate installation with architect and or contractor. Place cabinet on wall surface and secure with proper fasteners per application; make sure unit is level. Transfer mounting points and drill pilot holes.

Pre-drilled mounting holes spacing:

y = 11-1/2" c.c.

x = 11" c.c.

\* To comply with ADA Code, one usable shelf must be mounted no higher than 44" above finished floor (4.2.4).

\* Please note if wall surface unit is to be mounted on is uneven - it will result in gapping and or unevenness.

### NOTES