

VARIES 37" O.A. 76" HIGH PANEL BRACKET 76" HIGH CONTINUOUS ALUM. SHOWER CORNER BRACKETS (AT BACK WALLS) 54" CONT. BRACKETS ONTINUOUS BRACKETS CONTINUOUS HGH **VARIES** 36" BASE LTERRAZZO BASE

FRONT ELEVATION NTS

SIDE ELEVATION NTS





Standard Elevations:

- (Drawings are not to scale)
- Shower/Dressing with Flanged Base
- Continuous Brackets
- Galvanized Flanged Base


Note:


- 1. Doors larger than 30" are to be set to the closed position.
- 2. Where pilasters and panels meet there is a ½" space.
- 3. Where Pilasters and/or panels meet a wall there is a 1" space.
- 4. Headrail shall be cut 2" longer than the overall dimension, and cut to size in the field by the installer.


Notes:


- 1. Elevations shown are floor mounted headrail-braced using continuous brackets.
- 2. No shower curtain hooks will be supplied unless specified for both the shower compartment and the dressing compartments (10 per opening).
- 3. Shower curtains will be supplied only when quoted with the order.

801 E. Corey Street • Scranton, PA 18505 • 800.445.5148 www.scranton products.com

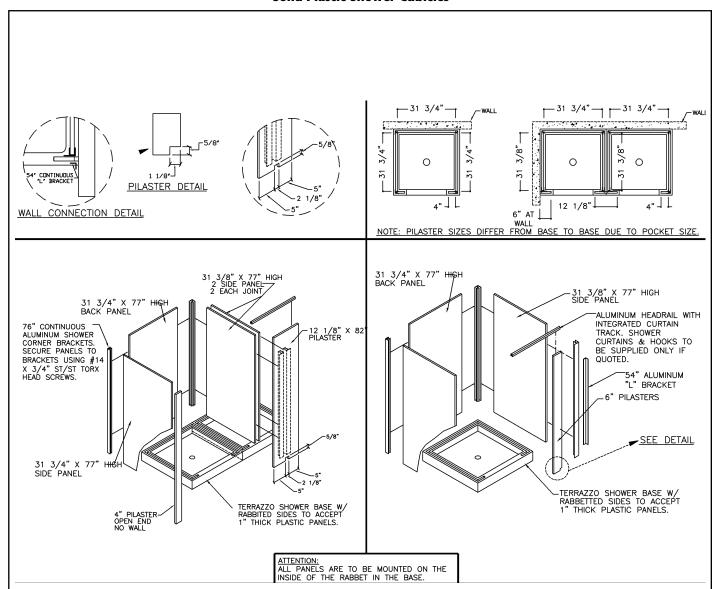

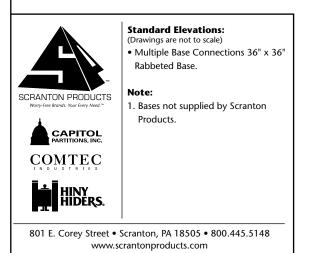

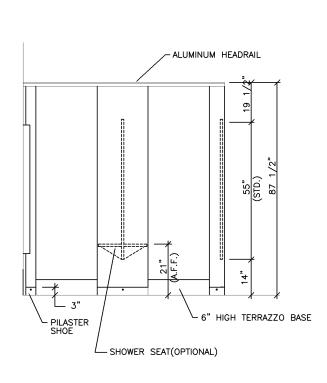

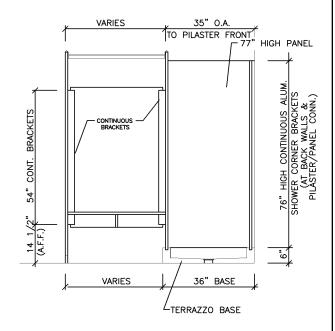

STD. FRONT ELEVATION

STD. SIDE ELEVATION



CAPITOL PARTITIONS, INC. COMTEC HINY HIDERS

Standard Elevations:

(Drawings are not to scale)

• Shower/Dressing with Rabbeted Base

Note:

- 1. Doors larger than 30" are to be set to the closed position.
- 2. Where pilasters and panels meet there is a ½" space.
- 3. Where Pilasters and/or panels meet a wall there is a 1" space.
- Headrail shall be cut 2" longer than the overall dimension, and cut to size in the field by the installer.

Notes:

- 1. Elevations shown are floor mounted headrail-braced using continuous brackets.
- 2. Shower hooks will be supplied for both the shower compartment and the dressing compartments (10 per opening).
- 3. Shower curtains will be supplied only when quoted with the order.

801 E. Corey Street • Scranton, PA 18505 • 800.445.5148 www.scrantonproducts.com