



# U648

## Folded Towel & Waste Combination Unit


Revision 03/11

JOB #:

ITEM #:

QUANTITY:

MOUNTING	HANDING	TYPE	SIZE	OTHER

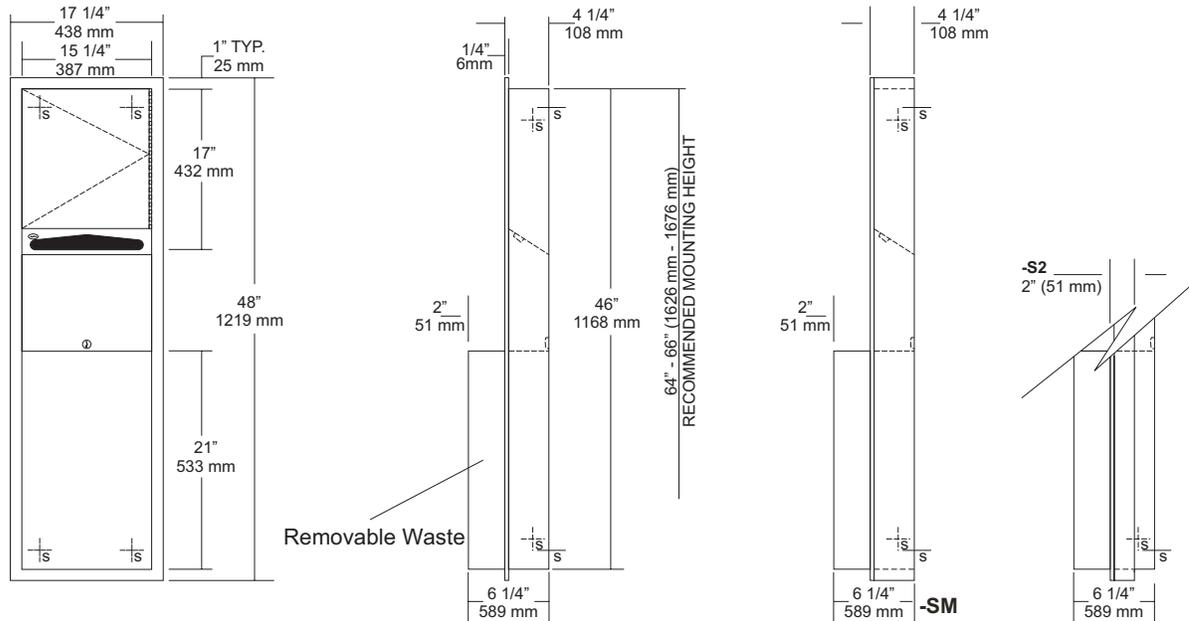

### SPECIFICATIONS

**Body:** Fabricated of #22 ga stainless steel with a #4 satin finish.

**Flange:** Fabricated of #22 ga stainless steel with a #4 satin finish and 1/4" returns to wall, no miters or welds.

**Back:** Fabricated of stainless steel formed for rigidity with multiple welds to cabinet body.

**Dispenser:** Dispensing area has hemmed edges to prevent injury and towel tearing.

**Removable Extended Waste:** Fabricated of #22 ga. Stainless steel with radius edges and hemmed for safety. Receptacle is held in place by pin tumbler lock.

**Hinges:** Full length, stainless steel piano type hinge.

**Locks:** Pin tumbler commercial quality.

**Collars:** Fabricated of #22 ga stainless steel finished to match cabinet body.

**Overall Size:** 17 1/4"W x 48"H x 6 1/4"D  
**438mm x 1219mm x 159mm**

**Wall Opening:** 15 3/4"W x 46 1/2"H x 4"D  
**400mm x 1181mm x 102mm**

**U648-S2:** 2" semi-recessed. Collar, 2" (51mm) wall opening

**U648-SM:** Surface mounted

**Towel Capacity:** 600 c-fold or 800 multifold

**Waste Capacity:** 6.25 gallons (.85 cu ft)

### INSTALLATION

Coordinate installation with contractor and architect. Provide a rough wall opening 15 3/4"W x 46 1/2"H. Wall opening depth will depend on style mounting. If a semi-recessed mounting is required slip collar over back of unit before placing cabinet in wall opening. Remove waste and place unit in wall opening. Make sure unit is level in wall opening before securing. Secure cabinet with proper fasteners per each application. Place waste back into cabinet, fill with desired towels and secure door.

When cleaning cabinet, use a soft cloth, a non-abrasive or chloric solutions.

### NOTES