

AJW

U735-1622-SM

Medicine Cabinet


REVISION 07/16

JOB #:

ITEM #:

QUANTITY:

MOUNTING	HANDING	TYPE	SIZE	OTHER
----------	---------	------	------	-------

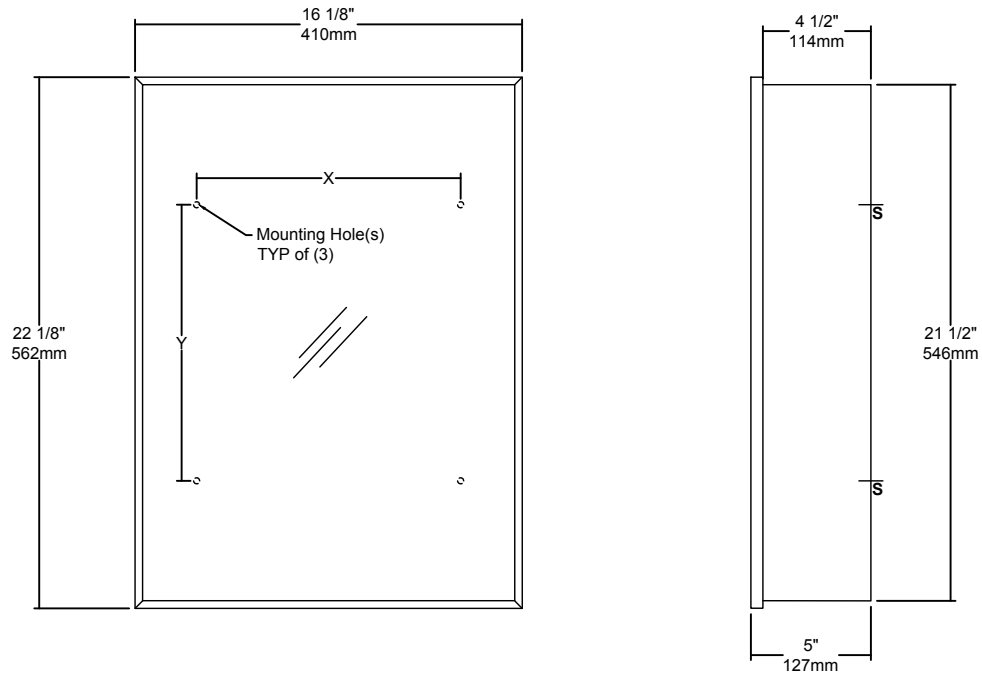

SPECIFICATIONS

Body: Formed and welded steel housing; 26ga steel with white, heat cured, acrylic paint finish.

Shelving: 26ga galvanized steel shelves with white, heat cured, enamel paint finish, (2) Fixed Typical, Please advise for removable

Mirror Door: Framed mirror door; 2mm float glass mirror door front; 30ga steel door back with white, heat cured, acrylic paint finish; Reversible for left-hand or right-hand door swing; Magnetic catch in cabinet body flange aligns to striker plate on the door, (1) typical.

Frame: Polished stainless steel frame.

Hinges: 16" piano hinge welded to the door and mechanically fastened to the cabinet body, (1) typical.

Overall Size: 16-1/8"W x 22-1/8"H
410mm x 562mm

INSTALLATION

Coordinate installation with architect and or contractor. Place cabinet on wall surface and secure with proper fasteners per application; make sure unit is level. Transfer mounting points and drill pilot holes.

Pre-drilled mounting holes spacing:

y = 11-1/2" c.c.

x = 11" c.c.

* To comply with ADA Code, one usable shelf must be mounted no higher than 44" above finished floor (4.2.4).

* Please note if wall surface unit is to be mounted on is uneven - it will result in gapping and or unevenness.

NOTES