

# AJW

## U735-1626

Medicine Cabinet

REVISION 07/16

JOB #:

ITEM #:

QUANTITY:


MOUNTING

HANDING

TYPE

SIZE

OTHER

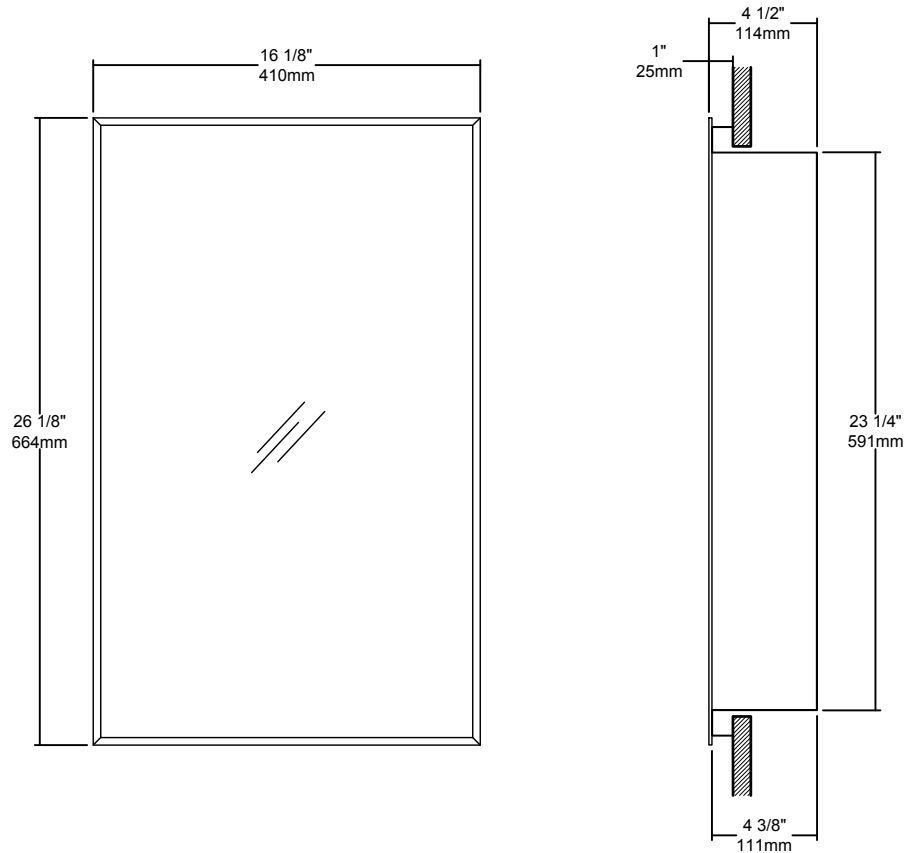

### SPECIFICATIONS

**Body:** One piece drawn steel housing; 26ga steel construction with white, heat cured, acrylic paint finish.

**Shelving:** 26ga galvanized steel shelves with white, heat cured, enamel paint finish, (2) adjustable shelves

**Mirror Door:** 2mm Float glass mirror door front; 30ga steel door back with white, heat cured, acrylic paint finish; Reversible for left-hand or right-hand door swing; Magnetic catch in cabinet body flange aligns to stainless steel striker plate on the door, (1) typical.

**Frame:** Polished stainless steel frame.

**Hinges:** 16" piano hinge welded to the door and mechanically fastened to the cabinet body, (1) typical.

**Overall Size:** 16-1/8"W x 26-1/8"H  
410mm x 664mm

**Wall Opening:** 14"W x 24"H x 3-1/2"D  
356mm x 610mm x 89mm

### INSTALLATION

Coordinate installation with architect and or contractor. Place cabinet in wall opening (14"W x 24"H x 3-1/2"D) and allow cabinet to swing left or right without interference. Secure with proper fasteners per application; make sure unit is level. Transfer mounting points and drill pilot holes. Secure unit to surface using proper fasteners per application.

\* To comply with ADA Code, one usable shelf must be mounted no higher than 44" above finished floor (4.2.4).

\* Please note if wall surface unit is to be mounted on is uneven - it will result in gapping and or unevenness.

### NOTES