





UX119-BF

Soap Basket

Job #: _____

Item #: _____

Qty : _____

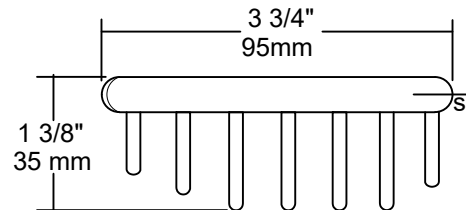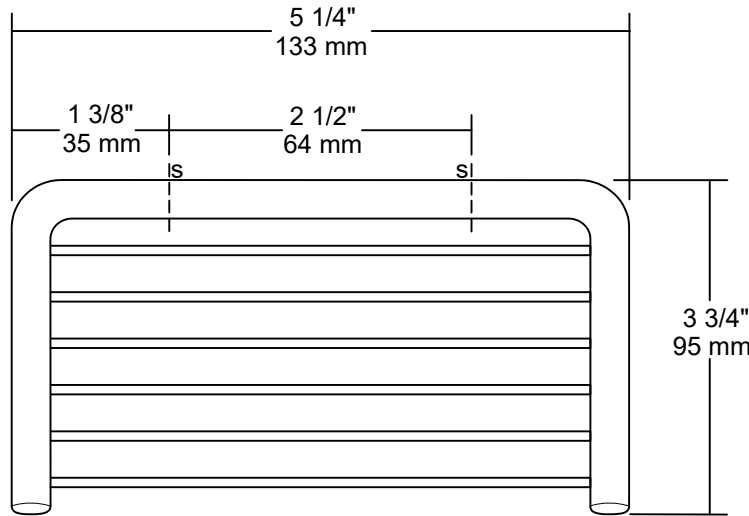

Drawing is for assembly description only.
Components are not to scale for clarity purposes.

Approval - Must Sign

Company _____

By _____ Date _____

Approved Approved as Noted (Release for Production)

Approval: Must Check One

Specifications

Basket: Fabricated of bright polished stainless steel. Main support brace and mounting bracket has a O.D. of 3/8" thick material with two exposed mounting points. Lower supports that support soap and allows water to drain has an O.D. of 1/8".

Overall Size: 5 1/4"W x 1 3/8"H x 3 3/4"D
133mm x 35mm x 95mm

Installation Information

Provide an area on wall surface at desired or specified location. Place concealed mounting plate on wall surface and transfer mounting points. Drill pilot holes and secure with proper fasteners. Place snap on flange over plate and secure with set screw.